


Nut Milk Maker OM-240 User Manual

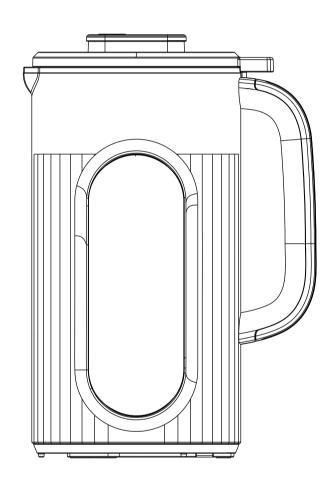

Please read this instruction manual carefully before using the product!

And keep the instructions properly for future reference.

FC CE FD/A RoHS

Website:https://ommohome.com E-mail:service@ommohome.com

Dear Valued Customer:

Thank you for choosing our Nut Milk Maker! This manual provides detailed product information and step-by-step operating instructions to help you get the most out of your new Nut Milk Maker.

For common issues, check the FAQ section at the end. If you need further assistance, feel free to contact us.

Website:https://ommohome.com

E-mail:service@ommohome.com

PACKAGE CONTENTS

1× Nut Milk Maker 1× Power Cord 1× Measuring Cup 1x Cleaning Brush

1x Sieve 1x Filter bag 1x User Manual

Specifications		
Rated voltage	AC 110V-120V / 60HZ	
Stirring Power	200w	
Heating power	800W	
Rated capacity	35 OZ(MAX)	

IMPORTANT SAFETY INSTRUCTIONS



1. Supervision & Usage Environment

Do not leave the appliance unattended while in use.

Unplug it when not in use, especially if leaving home for an extended time. Keep out of reach of children. Children should not use or handle the appliance without supervision.

This appliance is not intended for use by individuals with reduced physical or mental capabilities unless supervised.





2. Power Supply & Cord Safety

Ensure the local power supply matches the voltage marked on the appliance to avoid fire or damage.

Do not use damaged plugs or cords. Never bundle, stretch, or modify the power cord.

If the cord is damaged, contact customer service—do not attempt repairs yourself.

Never unplug the appliance with wet hands or wipe the plug with a damp cloth.





3. Placement & Surroundings

 
Keep the appliance away from flammable or explosive materials and heat sources (e.g., ovens).

Do not use or store in damp areas.

Do not immerse the appliance in liquid or pour water on it.

Prevent water from entering the power socket or base.

If water enters the unit, dry it thoroughly before reuse.

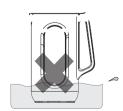



4. Operation & Handling Precautions

Do not open the lid or touch the main unit during operation. Steam and hot liquid may cause burns.

After operation, the inside of the cup, lid, and blade remain hot—avoid contact until cooled.

Do not drink before the pulping process is complete—uncooked soy milk may be harmful.

Always turn off and unplug the unit before pouring out the contents.



5. Assembly & Stability

Do not lift the appliance by the lid to prevent accidental separation or spills.

6. In Case of Power Failure or Abnormal Operation

If power is interrupted during operation, discard the contents and start over. Reheating partially processed ingredients may cause overflow or malfunctions.

Use heat-resistant containers when pouring out hot beverages to avoid burns or splashes.

7. Temperature-Related Warnings

Do not use hot water (above 70°C / 158°F) to make nut milk as it may affect performance or cause overflow.

If filtering is needed, be cautious—the filter and residue will be hot. Avoid aiming it at people to prevent burns.




8. Safe Distance During Use

Maintain distance between the appliance and nearby electrical outlets or objects while in operation.

Keep away from flammable or explosive items, and ensure the plug remains easily accessible.



PRODUCT OVERVIEW

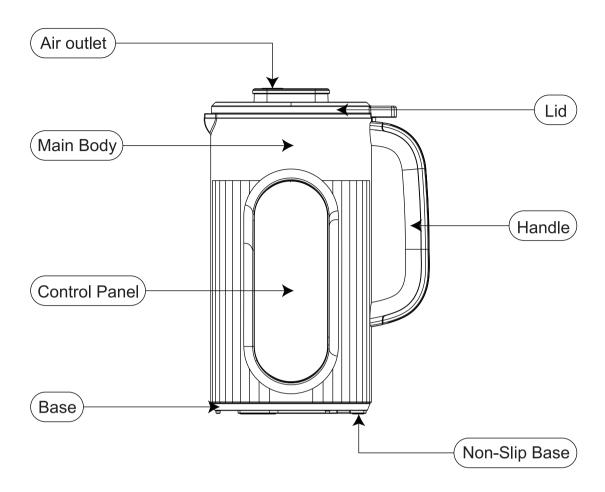


! Note

This product is for use only in areas below an altitude of 2,000 meters. Please pay attention to the following operations when the altitude exceeds 2,000 meters.

This product has altitude adaptive function, please perform altitude adaptive before first use in plateau areas:

- 1. Please add water between the "MAX" and "MIN" water level marks (without ingredients).
- 2. Connect the power supply. In standby mode, press and hold the "Start/Cancel" button for 3 seconds. After the display shows "hh", press the "Start/Cancel" button again to enter the water boiling and high-altitude identification program.
- 3. After the water boiling is completed, intelligent altitude recognition is accomplished.
- 4. After the intelligent altitude recognition, please add the corresponding ingredients as required by the recipe in the manual and start your culinary journey.

USING YOUR NUT MILK MAKER

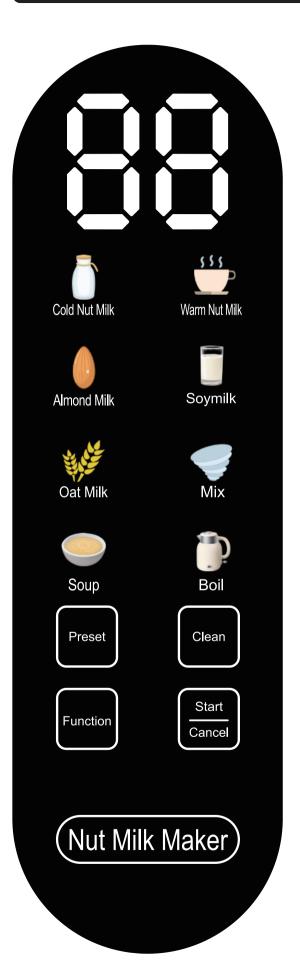



Plug in the power cord. The control panel will light up, a "beep" will sound, and "-" will appear on the LED screen, indicating standby mode.



Press the "Start/Cancel" button to enter the function selection.



 
Press the "Function" to select a function (Cold Nut Milk, Warm Nut Milk, Almond Milk, Soy Milk, Oat Milk, Mix, Soup, or Boil).



Light Indicators: The selected mode will blink, while the others stay solid.



Press Start/Cancel to confirm your selection and start the operation.
Light Indicators: Only the active mode will remain lit; all others will turn off.

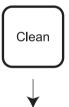

Cleaning function: Press the "Clean" button, then press the "Start/Cancel" button to enter cleaning mode. Once cleaning is complete, the machine will automatically return to standby mode.



Note: Do not add highly corrosive cleaning agents into the nut milk maker.



When the machine is running, press the "Start/Cancel" button, and the machine will stop working and return to standby mode.

PRESET OPERATION

1.Enter Preset Mode

Press "Start/Cancel", then press "Preset". The screen will display "1H" (1 hour) and a beep will sound.

2.Set Preset Time

 
Press "Preset" repeatedly to adjust the time from 1 hour up to 12 hours.

3. Select a Function


Press "Function" to choose one mode: Cold Nut Milk, Warm Nut Milk, Almond Milk, Soy Milk, or Boil. Only the 5 modes can be preset. The selected function will flash, while the others stay lit. Press Start/Cancel to confirm.

4.Preset Successful

The selected function will stay lit, and the screen will begin counting down.

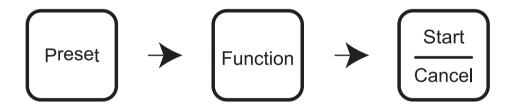

CLEANING AND MAINTENANCE

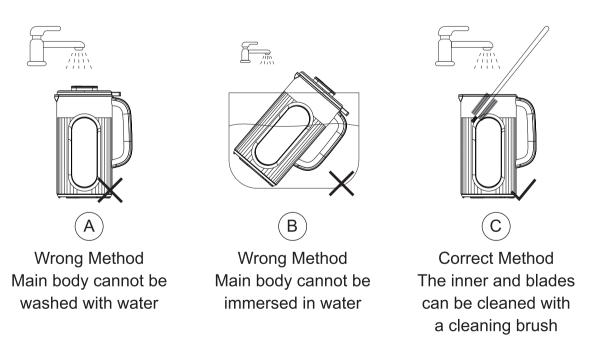

- 1.Unplug the power cord from the machine and the power supply, then wait for the appliance to cool before cleaning.
- 2. Ensure the appliance socket is wiped dry before using it again.
- 3.Do not immerse the main unit in water or any liquid for cleaning.

- 4. Avoid using highly corrosive detergents or wire brushes to clean the interior. It is recommended to soak it in hot water and detergent before cleaning.
- 5.Due to water quality, a mixture of calcium carbonate and magnesium carbonate can form during the heating process.
- 6.If after pulping, the inside of the cup and other stainless steel surfaces change color or turn blue, this is a normal phenomenon and is harmless to the human body. Please drink it with confidence.

(Phosphate ions and calcium, magnesium and other ions in the food will crystallize under certain temperature conditions and cause bluing, which can be wiped off with vinegar.)

- 7.Heavier sediments may accumulate as scale at the bottom of the jar, which can increase boiling time and cause more noise.
- 8.To clean the scale, use edible vinegar by mixing it with water in a 2:1 ratio.
- 9.Bring the mixture to a boil and allow it to cool. Do not heat it directly again.
- 10.Do not wash in the dishwasher or tumble dry.
- 11. The inner parts and blades can be cleaned with a brush (see Figure C).

Note:

- •For the first use, fill the machine with water up to the highest level, boil, pour out, and rinse with clean water. Repeat this process once or twice to remove any dust from production or storage.
- •The blades in the jar are very sharp and cannot be removed, so exercise caution while cleaning. Never attempt to remove the blade or touch any moving parts.

PRECAUTIONS FOR USE

- 1. This product is for home use, not for commercial use.
- 2. Some ingredients contain natural pigments that may stain the lid. This is normal and does not affect the safety or quality of the beverage. It is safe to consume.
- 3. In order to fully crush and release nutrients, the machine makes intermittent fast and slow sounds when working, which is a normal phenomenon.
- 4. Avoid continuous or repeated purée/paste-making without a break. Allow the motor to cool for at least 8 minutes between uses to prevent overheating and ensure long-term performance.
- 5. People with allergies or intolerance to nut or plant-based milk should choose a lower concentration, limit their intake, or avoid consumption altogether as needed.

■ TROUBLESHOOTING

Problem	Cause	Solution	
Indicator light doesn't function	The power cord is not plugged in properly.	Plug in the power cord properly.	
Buttons don't function	The cup lid is not aligned with the indicator mark.	Close the cup lid as required and align it with the indicator mark.	
The machine is not working	No function is selected The machine itself is faulty	Select the corresponding function Contact Us: service@ommohome.com	
E1	NTC Short Circuit	Contact Us: service@ommohome.com	
E2	The jar lid is not closed, or the indicator mark is not aligned.	Close the jar lid as required and align it with the indicator mark.	
E3	Machine dry burning, high-temperature fault code.	Turn off the power and stop using the machine immediately.	
The ingredients cannot be crushed and overflow when beating	Wrong function selected. Too much or too little ingredients. The machine itself is faulty.	Select the correct function. Add ingredients according to the recipe instructions. Contact Us: service@ommohome.com	
Burnt bottom of pot.	The inside of the cup is not cleaned. Too much food is added.	Clean the inside of the pot. Add ingredients according to the recipe instructions.	
Note: If the problem cannot be solved, please do not dismantle the machine without			

Note: If the problem cannot be solved, please do not dismantle the machine without permission, please contact us: service@ommohome.com

WARRANTY INFORMATION

Thank you very much for choosing OMMO products. Our designs and manufacturing are of high-quality standards. Your product is guaranteed for 1 year from the date of purchase. If you have any questions, please contact us.

CONTACT INFORMATION

Website: www.ommohome.com E-mail: service@ommohome.com



Please scan the QR code to get the installation and FAQ videos



Website:https://ommohome.com E-mail:service@ommohome.com