 


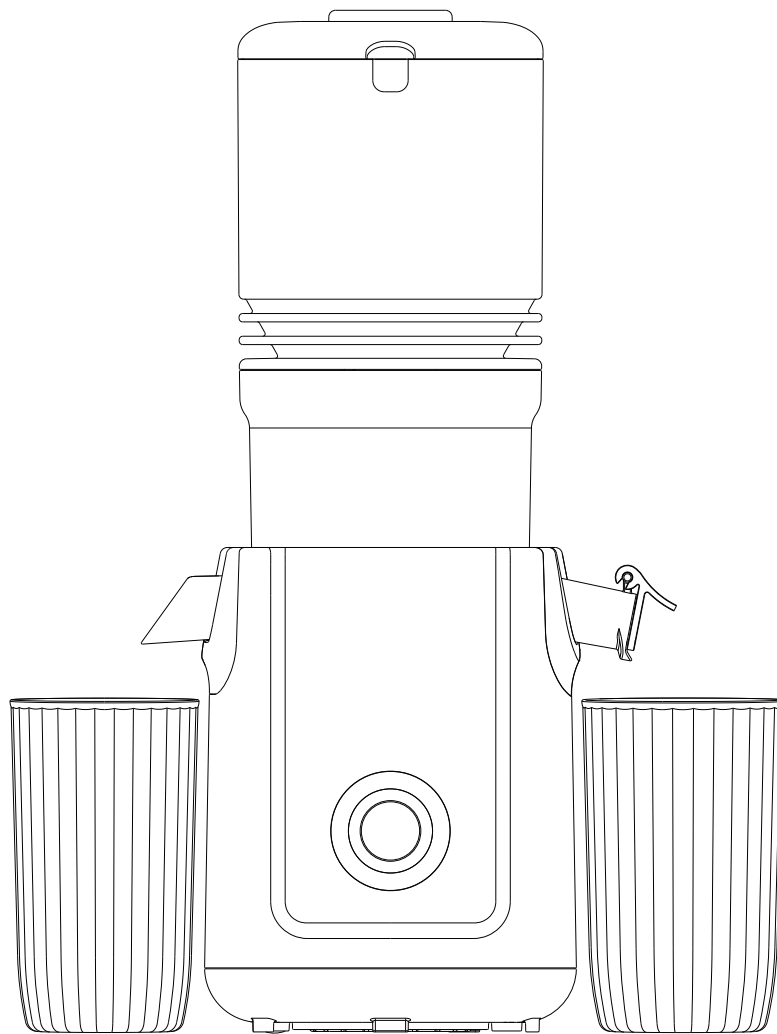

Slow Juicer

User Guide

OM-280



Website: <https://ommohome.com>
E-mail: service@ommohome.com



RoHS

Dear Valued Customer

Thank you for choosing our Masticating Juicer! This manual provides detailed product information and step-by-step operating instructions to help you get the most out of your new juicer.


For common issues, check the FAQ section at the end. If you need further assistance, feel free to contact us.

Package Contents

1x Machine Base	1 x Pusher
1 x Feed Chute	1 x Brush
1 x Pressing Cup	1 xInstruction Manual
1 x Auger	1 xFilter Skeleton
1 x Pulp Cup	1 x Juice Cup



Warm reminder

 1.Pull out the silicone plug and clean it. After cleaning, reinsert the plug into the slot until it is properly seated

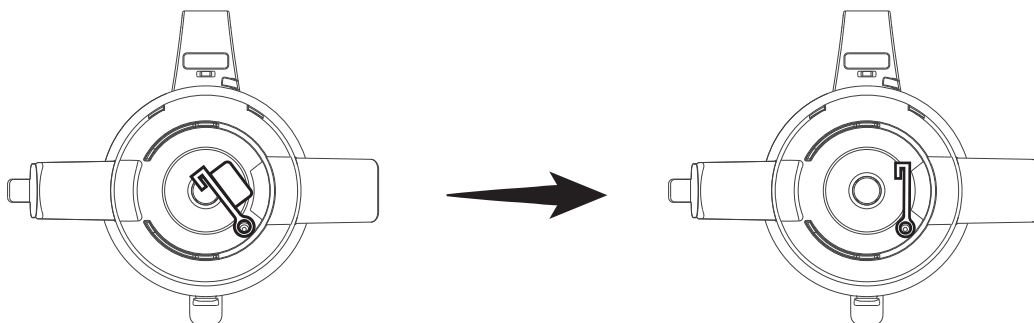

Product Overview

  1. Pusher
2. Safety Cover
3. Feed Chute
4. Handle of the feed Chute
5. Filter Skeleton
6. Auger
7. Pressing Cup
8. Silicone Stopper
9. Machine Base
10. Power Switch
11. Juice Cup
12. Pulp Cup
13. Brush

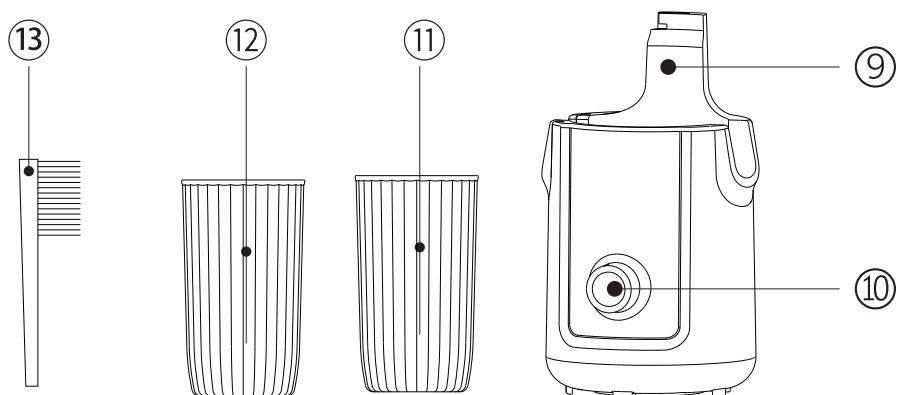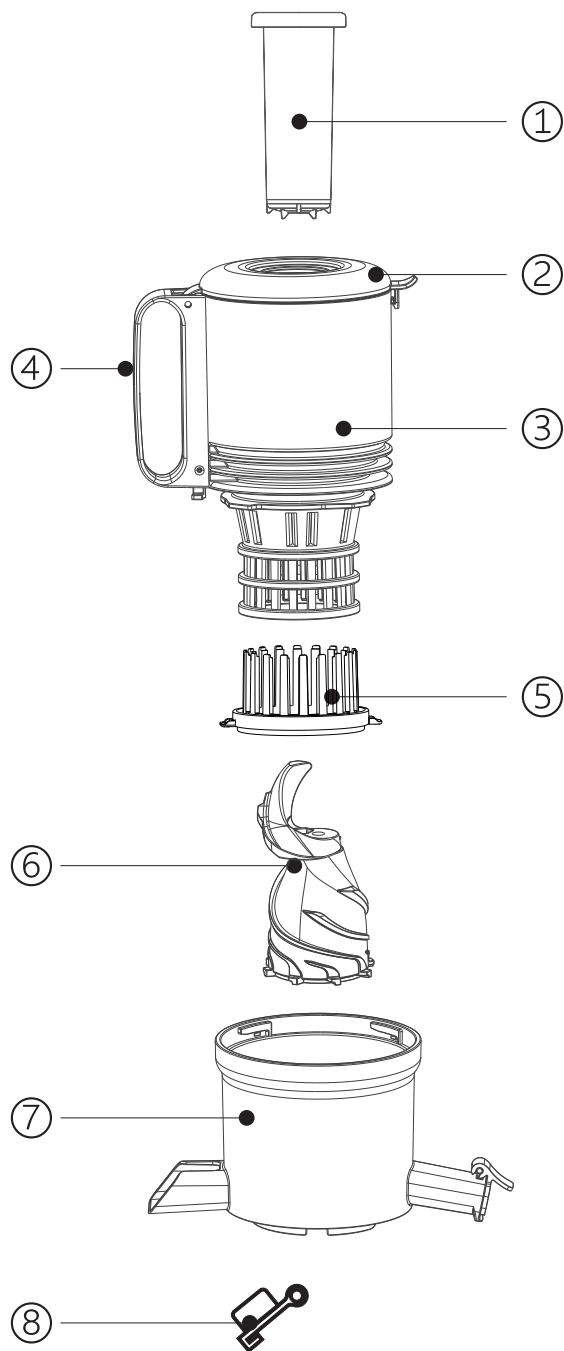

Safety Warnings and Precautions

General Use

1. Remove Packaging: Ensure all bags and packaging materials are removed before using the appliance.
2. Check Voltage: Confirm the appliance's voltage matches your power source.
3. Flat Surface Use: Only use the appliance on a stable, dry surface.
4. Keep Away from Children: The appliance is not a toy. Keep it out of reach of children, and do not allow them to use, clean, or maintain it.
5. Personal Safety: Improper use may cause property damage or personal injury. Follow instructions carefully.

Electrical Safety

1. Cord Safety: Keep the cord away from hot surfaces.
2. Damaged Appliance: Do not use the appliance if the cord, plug, or any part is damaged.
3. Unplug Safely: Turn off and unplug it when not in use, before assembly or disassembly, and before cleaning. Always pull from the plug, not the cord.
4. Usage Limit: Do not continuously operate the appliance for over 20 minutes to prevent overheating.
5. Maintenance: Contact our customer service for repairs.

Product Specifications

Rated Power Supply: AC 110V-120V/60HZ

Rated Power: 300 W

Feed Chute Size: 5.1 inches

 
Juice Cup Capacity: 550ml

Pulp Cup Capacity: 450ml

2. Assembly:


Step 1


Attach the pressing cup to the machine base, ensuring that the curved groove corresponds to the juice outlet.

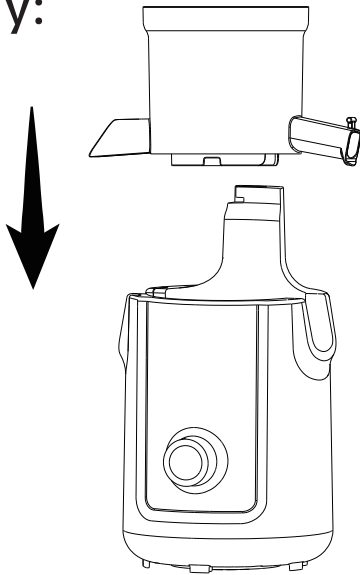

Step 2

  Align the auger with the motor shaft and insert it downward into the pressing cup, rotating it to ensure proper installation.

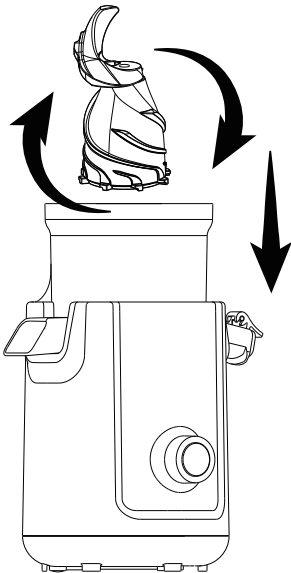

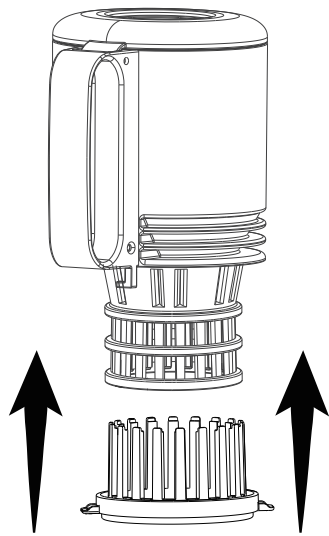


Step 3

Install the filter skeleton

Handle of the
feed cup

 The left side of
the pulp outlet

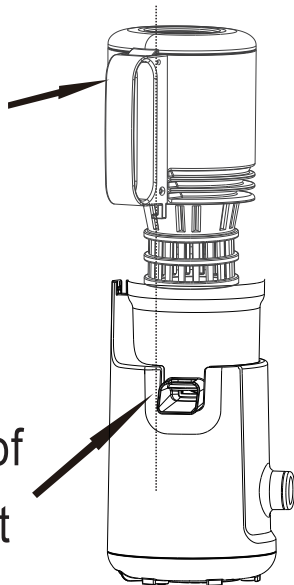


Step 4

Align the handle of the feed chute and the left side of the pulp outlet, then put it down until the feed chute and the pressing cup contact closely.


Rotate

 Buckle

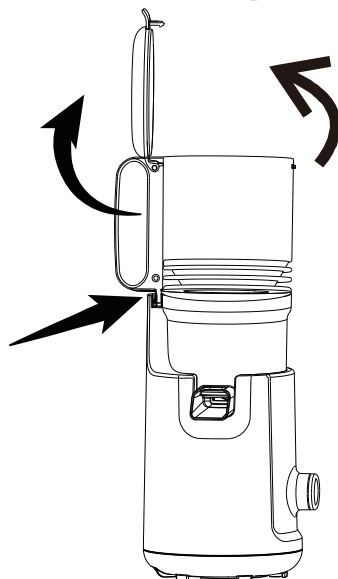

Step 5

 Open the flip cover to about 90 degrees. Place the feed chute onto the squeezing cup, then rotate it clockwise to secure it to the main body, making sure to refer to the "lock" mark on the product surface for guidance.

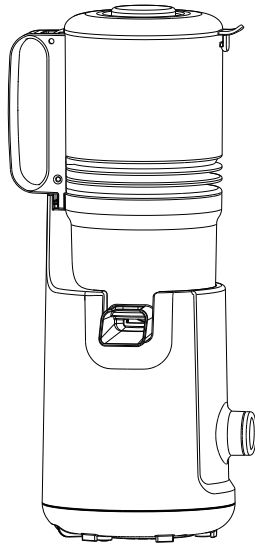

Cover the lid and complete the installation.

 
3. Operating Instructions

1. Ensure all components are correctly assembled, and place the machine on a flat surface.
2. Ensure the power switch is in the "OFF" position before plugging the unit.
3. Connect the juicer to a power source.
4. Place the juice cup and pulp cup in their proper positions.
5. Close the juice spout cover and listen for a beep to confirm successful assembly.
6. Cut ingredients into suitable sizes for smooth juicing.
7. Insert prepared ingredients into the feed chute and close the safety cover.
8. If larger ingredients do not feed smoothly, use the pusher to push them down.
9. If ingredients get stuck, switch the juicer to "OFF" and wait 1-2 seconds. Then, switch to "REV" and hold for 2-3 seconds. After reversing, turn it back to "OFF" for 1-2 seconds before resuming normal operation in the "ON" position.
10. After use, disassemble and clean the juicing components promptly. Use the cleaning brush to remove residue from the filter. Once dry, reassemble for the next use.




NOTE: The juicer will not work when the safety cover is open. Close the safety cover securely before switching the knob to the ON position.

4. Switch Instruction:

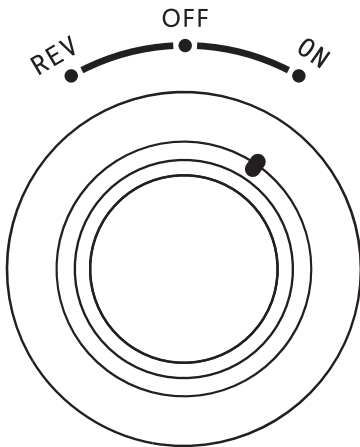


ON

 When ingredients have been placed into the feed chute and the safety cover is secured, turn the switch to the ON gear position to start the machine. If larger ingredients cannot enter smoothly, use the pusher to gently push them in.

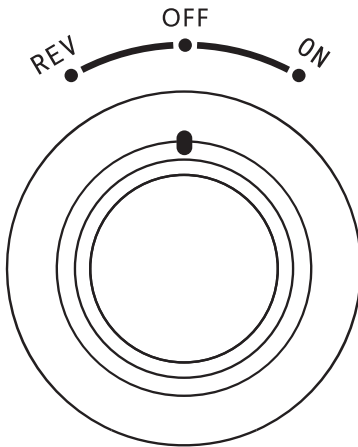

OFF

 
The equipment has stopped running.

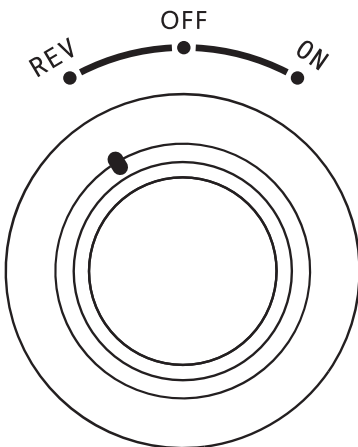

REV


If any ingredients cannot enter the Pressing Cup smoothly, switch the knob to the OFF gear position. Pause for 1-2 seconds, then switch to the REV gear position and hold down the reverse button for 2-3 seconds. After the reversal is complete, switch the knob to the OFF gear position for 1-2 seconds, and finally switch the gear knob to the ON gear position to resume juicing smoothly.

 5. Disassembly:

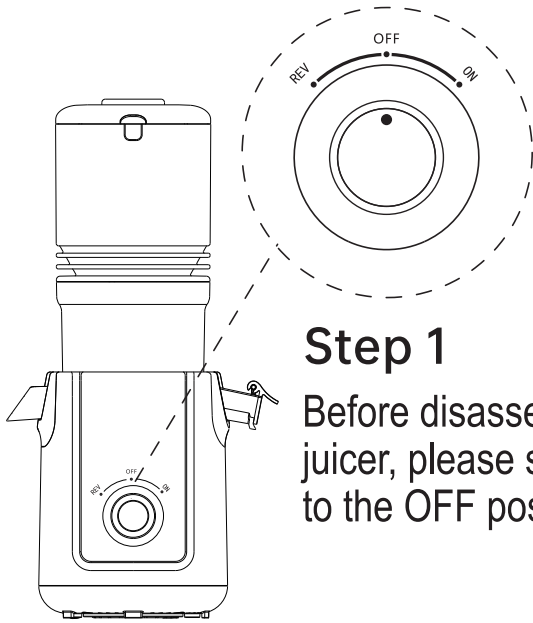


Step 1

 Before disassembling this juicer, please set the machine to the OFF position.

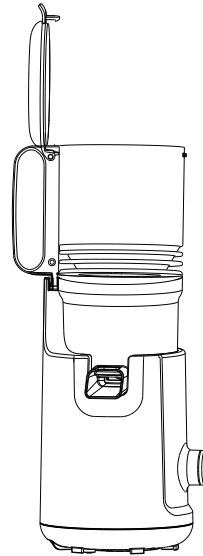


Step 2

 Open the safety cover to about 90 degrees.

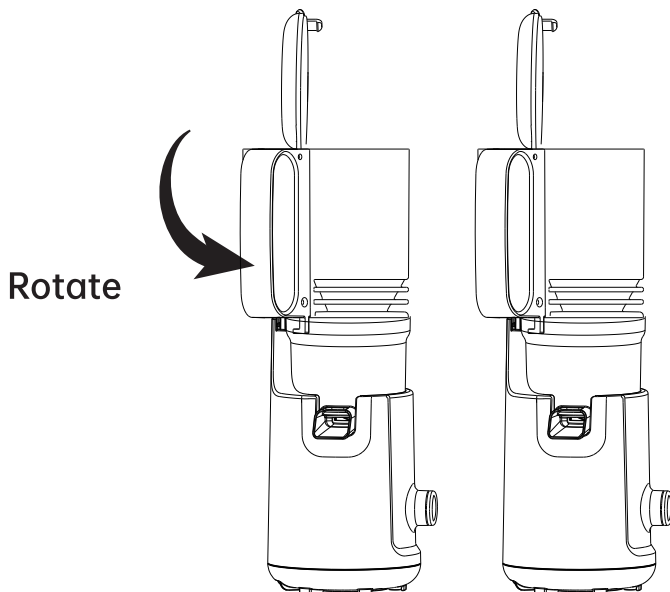


Step 3

 Turn counterclockwise to remove the feed chute.

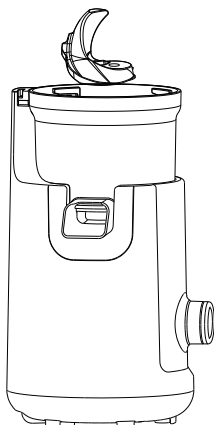


Step 4

 Remove the squeezing assembly from the machine base.

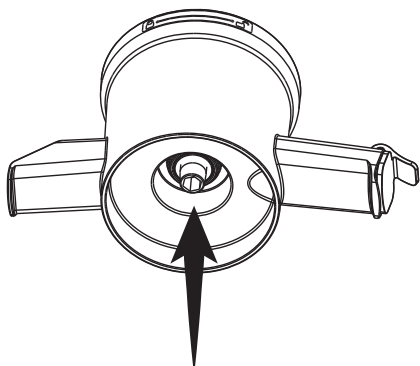


Step 5

 Topping out the screw sleeve from the bottom.

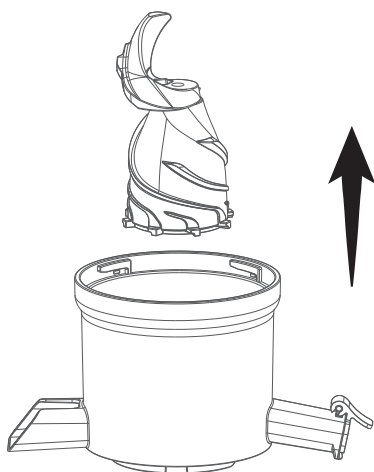

Step 6

 Remove the auger.

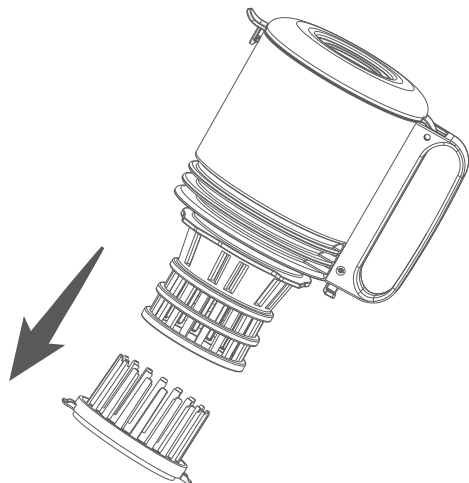

Step 7

Remove the filter skeleton.
(After cleaning, please insert the filter skeleton inside the bottom of the feed chute for next use.)

 


Caution:

During disassembly, firmly grip the components and main unit by hand to prevent slipping and damaging the product.

It is strictly prohibited to disassemble components when the machine is running to avoid potential personal injury accidents.

6. Cleaning and Maintenance:

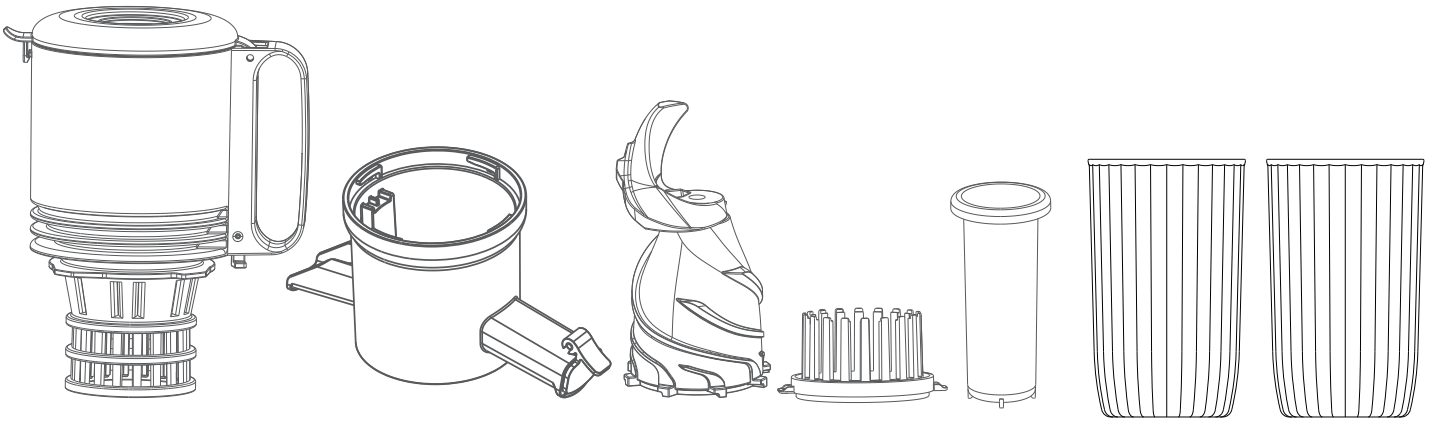

1. After using the product, wipe the main unit with a dry cloth and clean the juicing components with a soft cloth and water.
2. Wash disassembled parts with water (as shown in the diagram). If the filter is severely clogged with fruit residue gently wipe it with a slightly damp cloth soaked in neutral detergent, then clean it with a damp cloth.
3. Do not use volatile oils, detergents, or similar products for cleaning, as they may cause discoloration of the product.
4. Do not use steel wool, abrasive cleansers, or corrosive liquids (such as gasoline or acetone) to clean the equipment.
5. Do not put the accessories in the dishwasher for cleaning.
6. When cleaning the silicone of the filter, rotate it to different positions before cleaning. Rinse with clean water and use a brush to remove any remaining food residue. After cleaning promptly adjust the silicone of the filter to its original position for next use.
7. If the machine is not used for an extended period, keep it clean, dry, and store it in a well-ventilated and dry place.

FAQs

Problem	Analysis	Action
Masticating Juicers cannot turn on.	Power plug not inserted properly.	Reinsert the power plug firmly.
	Machine components not installed correctly.	Reassemble all components according to the operating instructions.
Stops while working	Safety cover may have become loose during operation.	Set the switch to the OFF position and check if the safety cover is securely closed.
	Excessive amount of ingredients or prolonged continuous operation causing motor overheating protection.	1. Turn the switch to the OFF position and unplug the power plug. Remove the pressing cup, open the feed chute, and reduce the amount of ingredients. 2. Reinstall the feed chute, plug in the power plug, turn the switch to the ON gear position, and continue operation. 3. If the machine stops due to prolonged operation, disconnect the power for half an hour before resuming use.

Problem	Analysis	Action
Difficulty in disassembling the pressing cup after juicing.	Ingredients being fed too quickly or too much, resulting in clogging.	Turn off the machine switch for 1-2 seconds, then switch to the REV gear position and hold down to reverse the machine for about 3 seconds.
Experiencing significant noise during operation.	The type and size of ingredients can affect the noise level of the juicer.	Cutting ingredients into small pieces can help reduce the noise level of the juicer.



SERVICE - 12-Month

We warrant to the original purchaser of this product that the product shall be free of defects in design, assembly material, or workmanship. We will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product). All above warranties are null and void if our product is not provided to us for inspection upon our request at the sole expense of the purchaser, or if we determines that our product has been improperly installed, altered in any way, or tampered with.

Our Product Warranty does not protect against acts of God such as flood, earthquake, lightning, war, vandalism theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (e.g.brownouts or sags), non-authorized program, or system equipment modification or alteration.

If you are not satisfied with this purchase, please contact us.
We offer 100% satisfaction guarantee

CONTACT INFORMATION



Please scan the
QR code to get
the installation
and FAQ videos

Brand Owner:A&B Holdings(Shen Zhen)Co.,Ltd
Address:20 LiShipai 1st Ln, #1301, Bantian St, Longgang
District, Shenzhen City,
Guangdong Province 518129
Website:<https://ommohome.com>
E-mail:service@ommohome.com

Disclaimer

Every effort has been made to ensure that the information and procedures in this guide are accurate and complete, no liability can be accepted for any errors or omissions and we reserve the right to make any changes without further notice to any products mentioned herein.