 


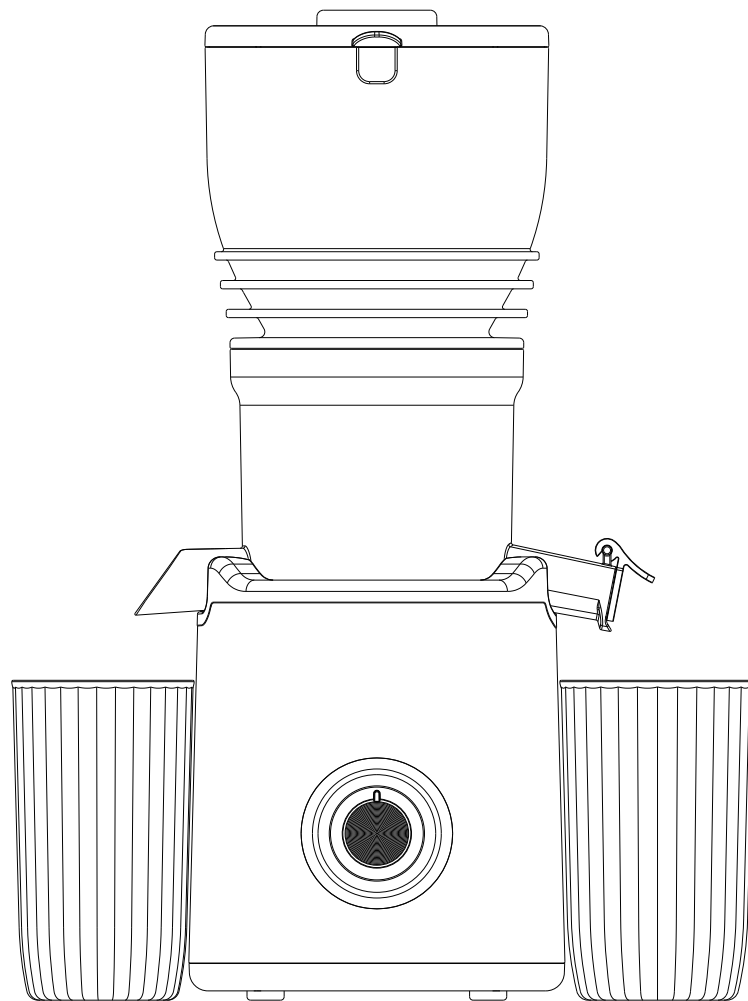

Slow Juicer

User Guide

OM-281



Website: <https://ommohome.com>
E-mail: service@ommohome.com



RoHS

Dear Valued Customer

Thank you for choosing our Juicer! This manual provides detailed product information and step-by-step operating instructions to help you get the most out of your new juicer.


For common issues, check the FAQ section at the end. If you need further assistance, feel free to contact us.

Package Contents

1x Machine Base	1 x Pusher	1 x Recipe
1 x Feed Chute	1 x Brush	
1 x Pressing Cup	1 x Instruction Manual	
1 x Auger	1 x Filter Skeleton	
1 x Pulp Cup	1 x Juice Cup	


Warm reminder

1.Pull out the silicone plug and clean it. After cleaning, reinsert the plug into the slot until it is properly seated.

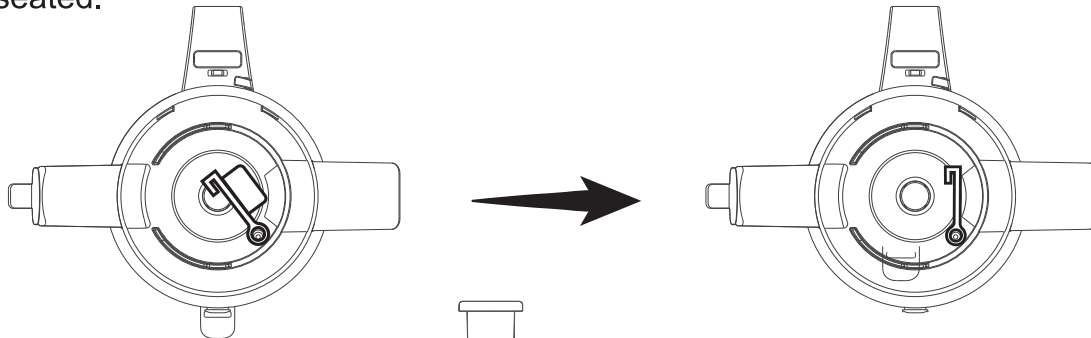

Product Overview

1. Pusher
2. Safety Cover
3. Feed Chute
4. Handle of the Feed Chute
5. Filter Skeleton
6. Auger
7. Pressing Cup
8. Silicone Stopper
9. Machine Base
10. Power Switch
11. Juice Cup
12. Pulp Cup
13. Brush

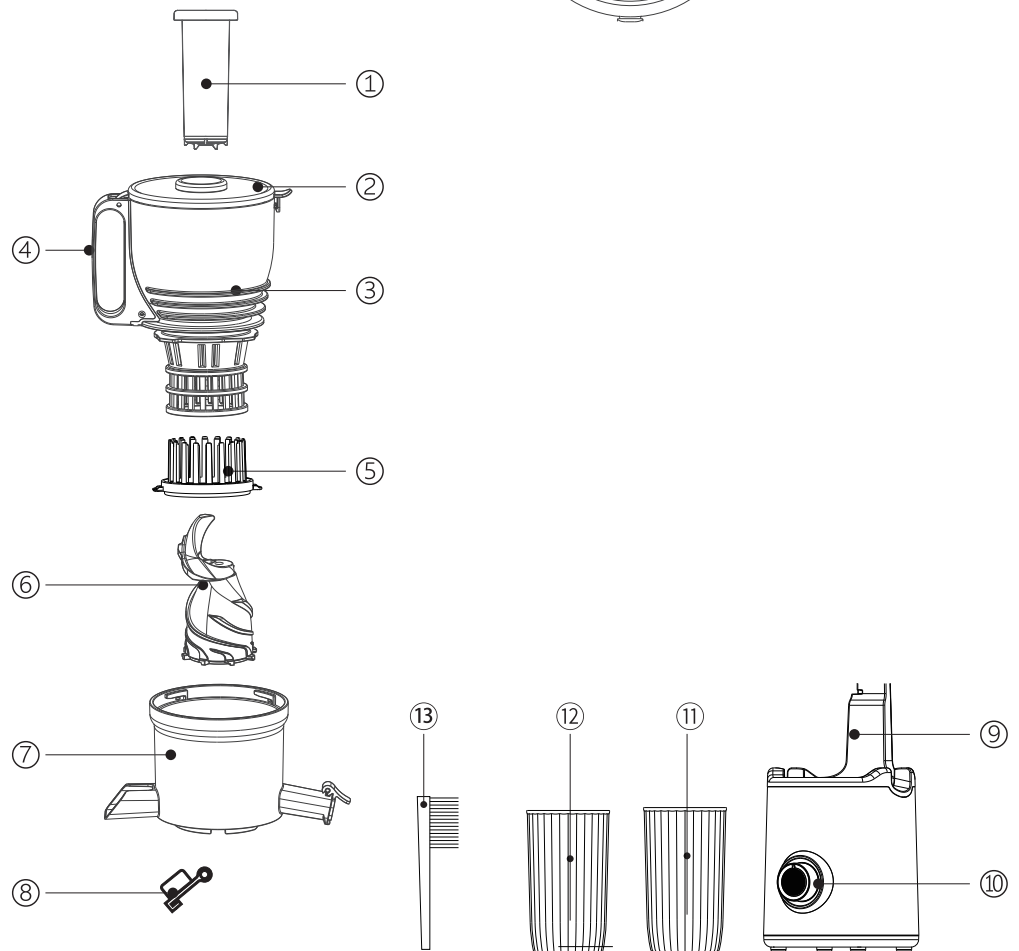

Dear Valued Customer

Thank you for choosing our Juicer! This manual provides detailed product information and step-by-step operating instructions to help you get the most out of your new juicer.


For common issues, check the FAQ section at the end. If you need further assistance, feel free to contact us.

Package Contents

1x Machine Base	1 x Pusher	1 x Recipe
1 x Feed Chute	1 x Brush	
1 x Pressing Cup	1 x Instruction Manual	
1 x Auger	1 x Filter Skeleton	
1 x Pulp Cup	1 x Juice Cup	


Warm reminder

 1.Pull out the silicone plug and clean it. After cleaning, reinsert the plug into the slot until it is properly seated.

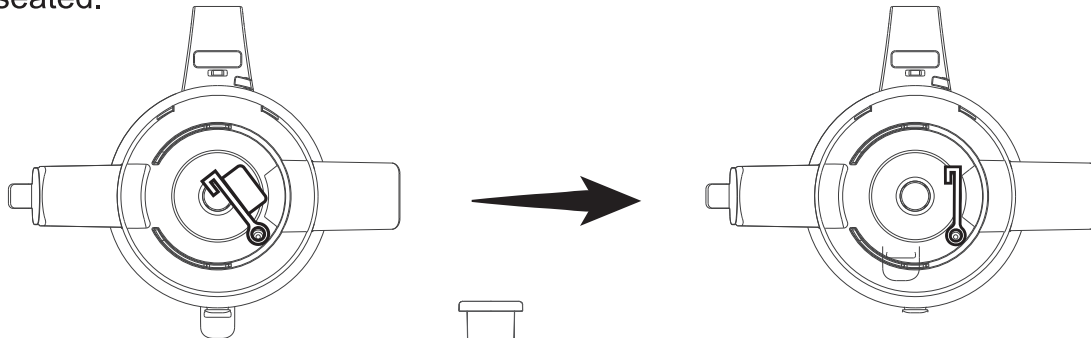

Product Overview

 1. Pusher
2. Safety Cover
3. Feed Chute
4. Handle of the Feed Chute
5. Filter Skeleton
6. Auger
7. Pressing Cup
8. Silicone Stopper
9. Machine Base
10. Power Switch
11. Juice Cup
12. Pulp Cup
13. Brush

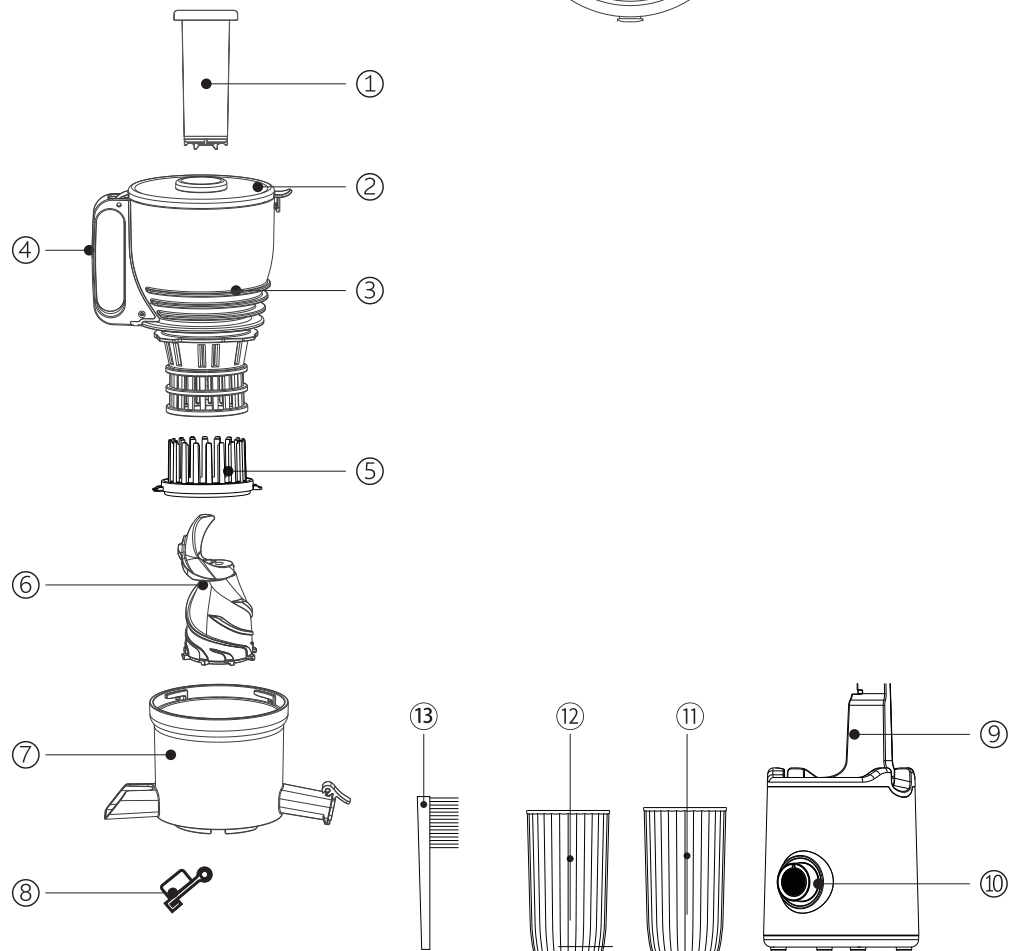

1. Safety Warnings and Precautions

General Use

1. Remove Packaging: Ensure all packaging bags and materials are removed before using the appliance.
2. Check Voltage: Confirm the appliance's voltage matches your power supply voltage.
3. Use on Flat Surfaces: Only use the appliance on a stable, dry surface.
4. Keep Away from Children: The appliance is not a toy. Store it out of children's reach, and do not allow them to use, clean, or maintain the appliance.
5. Personal Safety: Improper use may cause property damage or personal injury. Follow instructions carefully.

Electrical Safety

1. Power Cord Safety: Keep the power cord away from hot surfaces.
2. Appliance Damage: Do not use the appliance if the power cord, plug, or any part is damaged.
3. Safe Unplugging: Always unplug the appliance by gripping the plug (not the power cord) when not in use, before assembly/disassembly, or before cleaning. Turn off the power first.
4. Usage Limitation: Avoid continuous use exceeding 20 minutes to prevent overheating.
5. Maintenance: Contact our customer service for repairs.

Product Specifications

Rated Power Supply: AC 110V-120V/60HZ

Rated Power: 300 W

Feed Chute Size: 6.0 inches


Juice Cup Capacity: 550ml

Pulp Cup Capacity: 450ml

2. Assembly


Step 1

Attach the pressing cup to the machine base, ensuring that the curved groove aligns with the juice outlet.

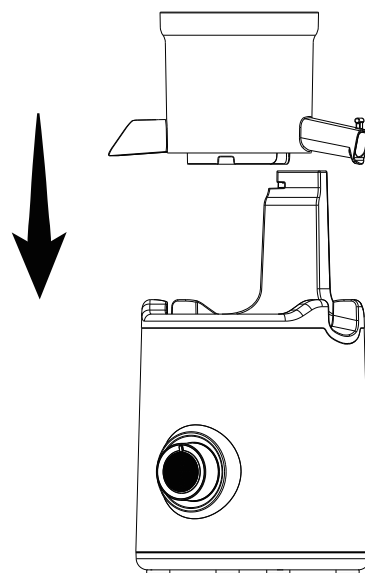


Step 2

Align the auger with the motor shaft, then insert it downward into the pressing cup and rotate it to ensure proper installation.

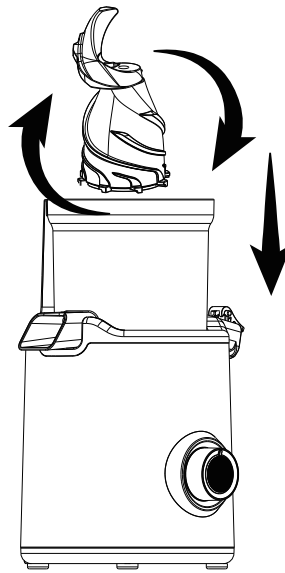

Step 3

Install the filter skeleton.

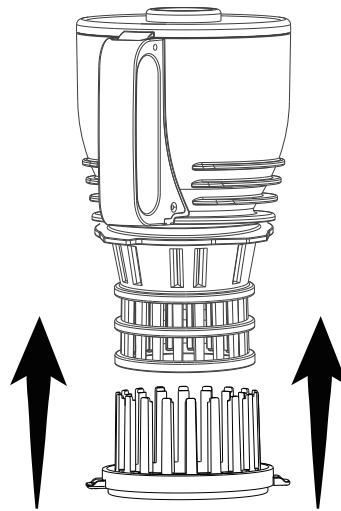


Step 4

Place the feed cup handle at the middle position between the juice outlet and the arrow mark on the main unit surface.


Handle of the feed cup

Middle position between the juice outlet and the arrow mark on the main unit surface

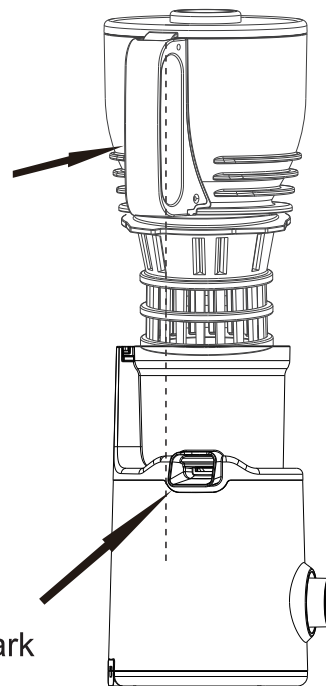


Step 5

Open the safety cover to approximately 90 degrees. Rotate the feed chute handle in the locking direction on the main unit's surface, ensuring the arrow on the handle aligns with the arrow on the main unit.

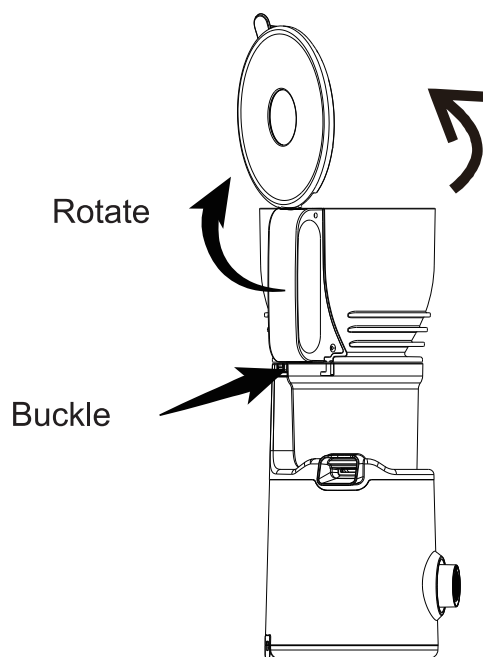

Step 6

Close the cover to complete the installation.

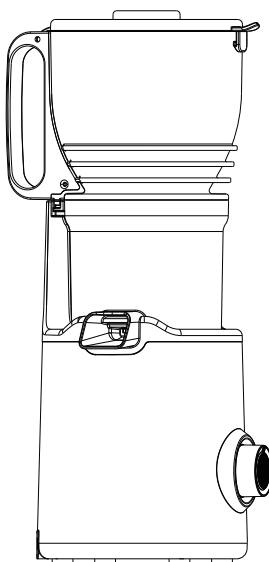

3. Operating Instructions

1. Ensure all components are correctly assembled, and place the appliance on a flat, level surface.
2. Ensure the power switch is in the "OFF" position before plugging the appliance into the power supply.
3. Connect the juicer to the power source.
4. Place the juice cup and pulp cup in their proper positions.
5. Close the juice outlet cover and a "beep" confirms successful assembly.
6. Cut ingredients into suitable sizes for smooth juicing.
7. Place prepared ingredients into the feed chute and close the safety cover.
8. If larger ingredients do not feed smoothly, use the pusher to push them down.
9. If ingredients get stuck, switch the juicer to "OFF" and wait 1-2 seconds. Then, switch to "REV" and hold for 2-3 seconds. After reversing, turn it back to "OFF" for 1-2 seconds before


resuming normal operation in the "ON" position.

10. After use, disassemble and clean the juicing components immediately. Use the cleaning brush to remove residue from the filter. Dry components completely before reassembling for future use.




NOTE: The juicer will not work when the safety cover is open. Close the cover securely before switching the knob to the ON position.

4. Switch Instructions

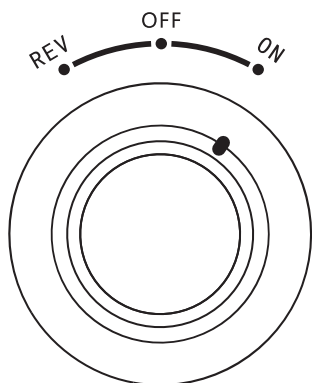


ON

After placing the ingredients into the feed chute and securing the safety cover, turn the switch to the "ON" position to start the machine. If large ingredients struggle to enter, gently push them in with the pusher.

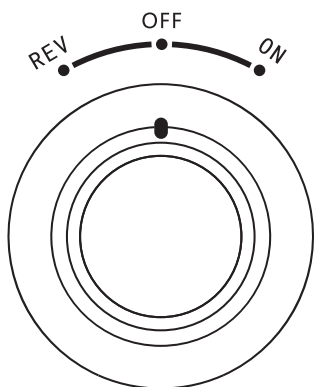

OFF


The appliance has stopped running.

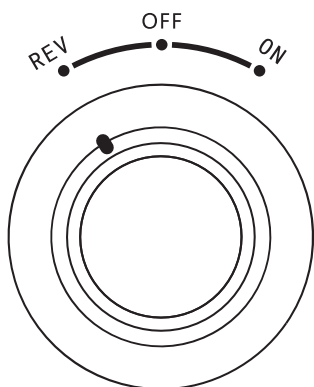


REV

- **Help with Stuck Ingredients:** If ingredients aren't going into the Pressing Cup smoothly, turn the knob to the "OFF" position. Then switch to the "REV" and hold for 2-4 seconds. Once done, turn back to "OFF", then switch to "ON" to continue juicing.
- **Help with Disassembly:** Turn the knob to "REV" before taking the juicer apart. After juicing, food may stick near the auger. The reverse function helps remove it to prevent clogging and make disassembly easier.


5. Disassembly

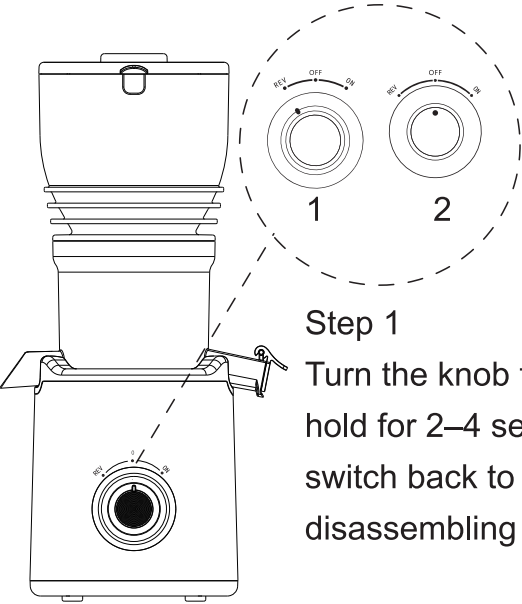


Step 1
Turn the knob to "REV" and hold for 2–4 seconds, then switch back to "OFF" before disassembling the juicer.

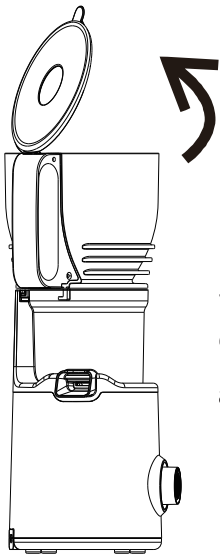


Step 2
Open the safety cover to about 90 degrees.

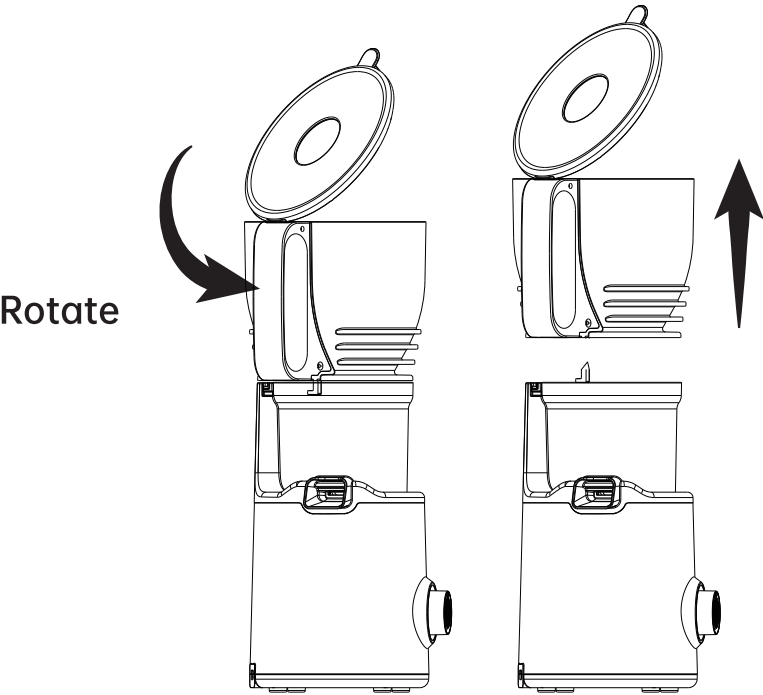

Step 3
Rotate counterclockwise to remove the feed chute.

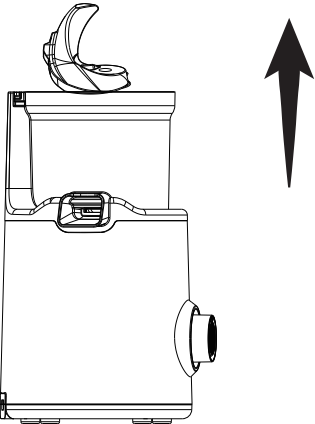


Step 4
Remove the squeezing assembly from the machine base.

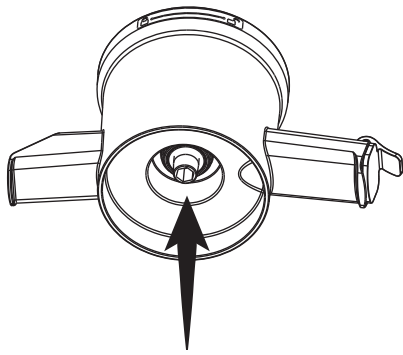

Step 5

Push out the screw sleeve from the bottom.

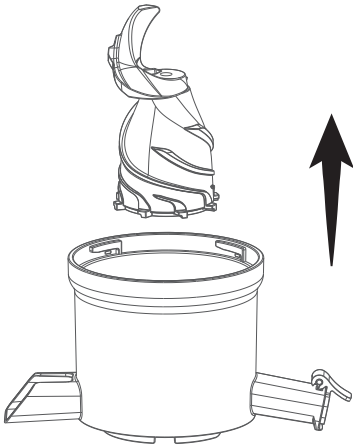


Step 6

Remove the auger.

Step 7

Remove the filter skeleton. (After cleaning, please insert the filter skeleton into the bottom of the feed chute for future use.)

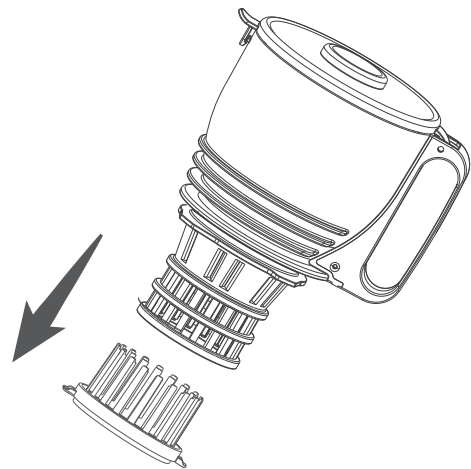


Caution:

During disassembly, firmly grip the components and the main unit to prevent slippage and damage.

It is strictly prohibited to disassemble components when the appliance is running to avoid potential personal injury accidents.

6. Cleaning and Maintenance

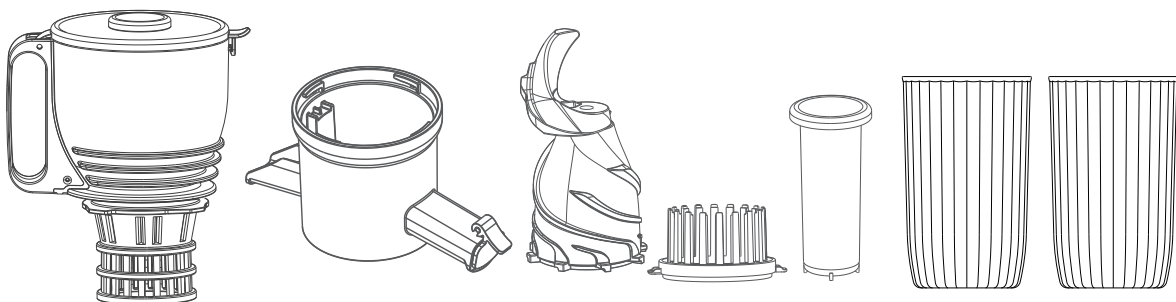

1. After using the juicer, wipe the main unit with a dry cloth and clean the juicing components with a soft cloth and water.
2. Wash disassembled parts with water (as shown in the diagram). If the filter is severely clogged with fruit residue, gently wipe it with a slightly damp cloth soaked in a neutral detergent, then clean it with a damp cloth.
3. Do not use volatile oils, detergents, or similar products for cleaning, as they may cause discoloration.
4. Do not use steel wool, abrasive cleansers, or corrosive liquids (e.g., gasoline or acetone) to clean the appliance.
5. Do not wash accessories in the dishwasher.
6. When cleaning the filter's silicone, first rotate it to different positions for thorough cleaning. Rinse with clean water and use a brush to remove residual food debris. After cleaning, immediately adjust the filter's silicone back to its original position for next use.
7. If the appliance is not used for an extended period, keep it clean and dry, and store it in a well-ventilated, dry place.

FAQs

Problem	Analysis	Solution
Juicer does not turn on	The power plug is not inserted properly	Reinsert the power plug firmly.
	Juicer components are not installed correctly	Reassemble all components according to the operating instructions
Juicer stops during operation	The safety cover may have become loose during operation	Set the switch to the OFF position and check if the cover is securely closed
	Excessive amount of ingredients or prolonged continuous operation triggers motor overheating protection	1. Turn the switch to the OFF position and unplug the power cord. Remove the pressing cup, open the feed chute, and reduce the amount of ingredients. 2. Reinstall the feed chute, plug in the power cord, turn the switch to the ON position, and continue operation. 3. If the juicer stops running due to prolonged operation, disconnect the power supply for half an hour before resuming use

Problem	Analysis	Solution
After juicing, the pressing cup is difficult to disassemble	Ingredients are fed too quickly or in excessive amounts, causing blockage	Turn off the juicer switch for 1-2 seconds, then switch to the REV gear and hold it down to reverse the juicer for about 3 seconds
The operation produces significant noise	The type and size of ingredients affect the juicer's noise level	Cut ingredients into small pieces can reduce the juicer's noise



12-Month WARRANTY

We warrant to the original purchaser of this product that the product shall be free of defects in design, assembly material, or workmanship. We will replace, at its option, any defective product free of charge (except for shipping charges for the product). All above warranties are null and void if our product is not provided to us for inspection upon our request at the sole expense of the purchaser, or if we determine that our product has been improperly installed, altered in any way, or tampered with.

Our Product Warranty does not protect against acts of God such as flood, earthquake, lightning, war, vandalism theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (e.g. brownouts or sags), non-authorized program, or system equipment modification or alteration.

If you are not satisfied with this purchase, please contact us. We offer 100% satisfaction guarantee.

CONTACT INFORMATION



Please scan the QR code to get the installation and FAQ videos.

Brand Owner: A&B Holdings(Shen Zhen)Co.,Ltd

Address: 20 LiShipai 1st Ln, #1301, Bantian St, Longgang District, Shenzhen City, Guangdong Province 518129

Website: <https://ommohome.com>

E-mail: service@ommohome.com

Disclaimer

Every effort has been made to ensure that the information and procedures in this guide are accurate and complete, no liability can be accepted for any errors or omissions and we reserve the right to make any changes without further notice to any products mentioned herein.